


SH-FL-51 Folding Side Shelf Kit for PD51 Series


This document shows how to install the SH-FL-51 Folding Side Shelf.

This folding shelf fits PD51 Series main components only.


Note: If you cannot understand these instructions or are concerned about safety of the installation contact a qualified contractor or contact AVFI at 1-877-834-3876

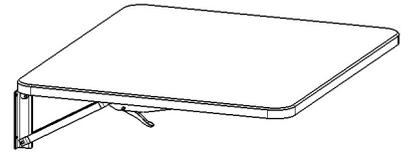

Supplied Parts

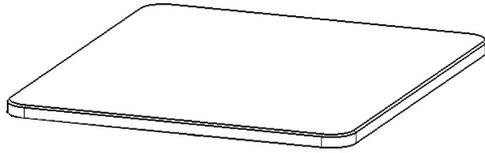


Shelf Panel

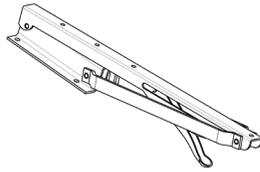

Brackets (2)

Supplied Hardware

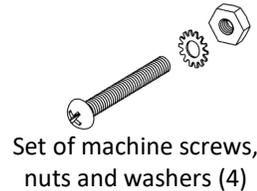


Set of machine screws, nuts and washers (4)



5/8" Screw (12)

Tools required

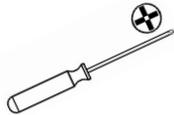

Phillips screwdriver





11/32 Wrench or pliers


- Find pre-drilled holes covered by the thermowrap film, this film can be easily puncture with a screwdriver to allow screw go through. Line up the brackets with the holes. Use Machine screws on upper holes and tighten washer and nut onto the inside, 5/8" screws go on the lower holes.

Image below shows pre-drill holes available on both sides for the following components:
PD51, PD5103, PD5107, RK5105 & RK5106

Images below show suggested pre-drill holes to use for **5104DE** when assembled for left or right-hand application

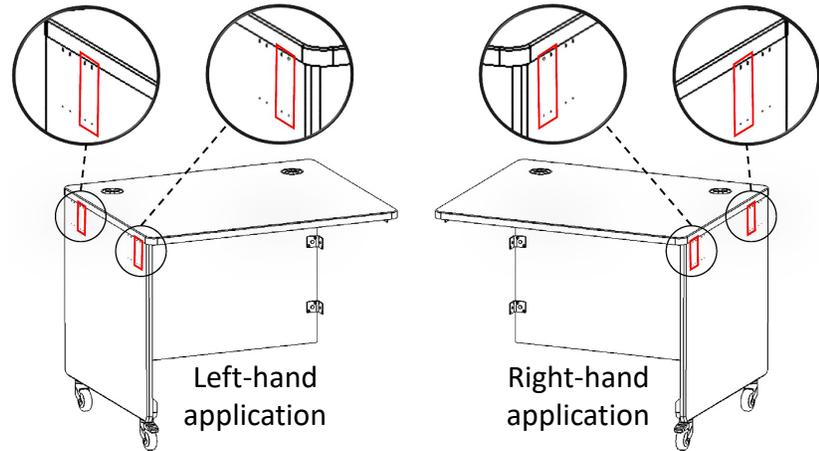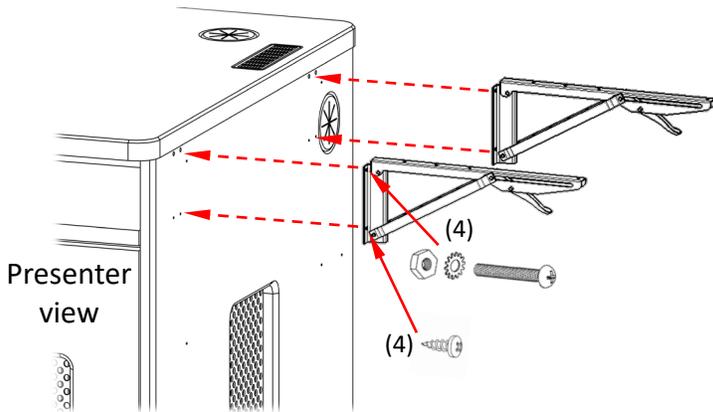

- Once brackets are installed, continue to fasten to the shelf by driving the 5/8" screws into pre-drilled holes.

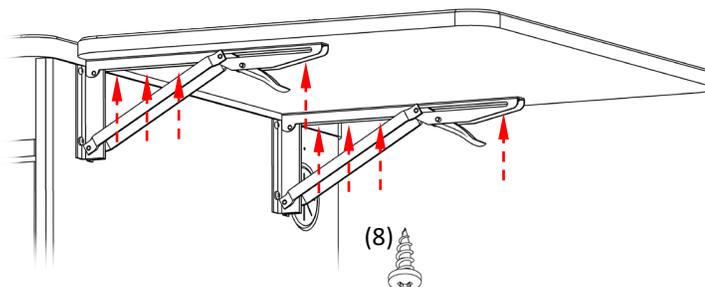

Assembly is complete, enjoy!